

Prepared for To Tatou Vai

By Tiu Te Matangi Ltd

June 2023

Acronyms

AVG Automatic valveless gravity filter
NES National Environmental Services

OEMP Operational environmental management plan

PACI Poly Aluminium Chloride SOP Standard operating procedure

SS Suspended solids
ST Settling Tank
TTV To Tatou Vai

WTP Water Treatment Plant

<u>Units</u>

μg/L milligrams per liter

Kg Kilograms

E. Coli Escherichia coli (E. coli) bacteria normally live in the intestines of people and animals.

Most *E. coli* are harmless and actually are an important part of a healthy human intestinal tract. However, some *E. coli* are pathogenic, meaning they can cause illness, either diarrhea or illness outside of the intestinal tract. The types of *E. coli* that can cause diarrhea can be transmitted through contaminated water or food, or through contact with animals or persons. (https://www.cdc.gov/ecoli/general/index.html)

Contents

Α	Acronyms	1
E	xplanation	3
1.	Where is the Avatiu Water Treatment Plant?	4
2. envi	Avatiu Water Treatment Plant – Areas where there are likely significant potential adverse vironmental impacts.	5
3.	How the WTP work?	6
4.	Management of Environmental Hazards and Risks	7
5.	Summary of Recommendations and Monitoring Programme	9
6. A	Appendices	11
6.	5.1 Risk Assessment Methodology Used	11
	5.2 To Tatou Vai (TTV) Water Treatment Plant (WTP) Operator's Daily Check List (Source: TTV reatment Division)	12
Tal	bles	
	le 1 Level of risk impact and probability	
	le 2 Matrix showing overall significance of the impact as a combination of the consequences and bability rating	
Fig	gures	
Figu whe	ure 1 - Location of Rarotonga's Water Treatment Plants with Avatiu in redure 2 Avatiu Water Treatment Plant where there is risk of PACI getting into the environment and ere there is potential risk to the Plant from the environmenture 3 - How the Avatiu Water Treatment Plant work (Source: TTV sign boards at each WTP)	5

Explanation

This supplementary plan is informed by the operational environment management plan main report. It provides for the management of environmental hazards and risks outside of the potential hazards and risks caused by the PACI. The plan covers the following:


- 1. Location of the Avatiu Water Treatment Plant;
- 2. Areas where there are likely significant potential adverse environmental impacts;
- 3. How the Water Treatment Plant works;
- 4. Management of potential environmental hazards and risks; and
- 5. Summary of Recommendations and Monitoring Programme

1. Where is the Avatiu Water Treatment Plant?



Figure 1 - Location of Rarotonga's Water Treatment Plants with Avatiu in red


2. Avatiu Water Treatment Plant – Areas where there are likely significant potential adverse environmental impacts.

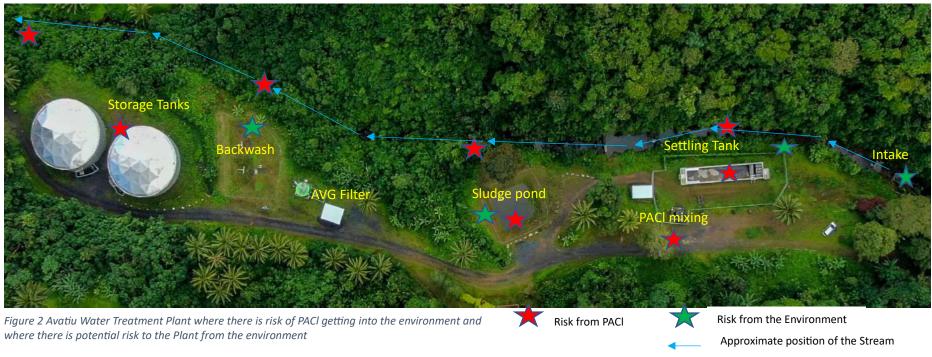

Note: Areas of risk from PACI is addressed in the main OEMP Report.

3. How the WTP work?

Figure 3 - How the Avatiu Water Treatment Plant work (Source: TTV sign boards at each WTP)

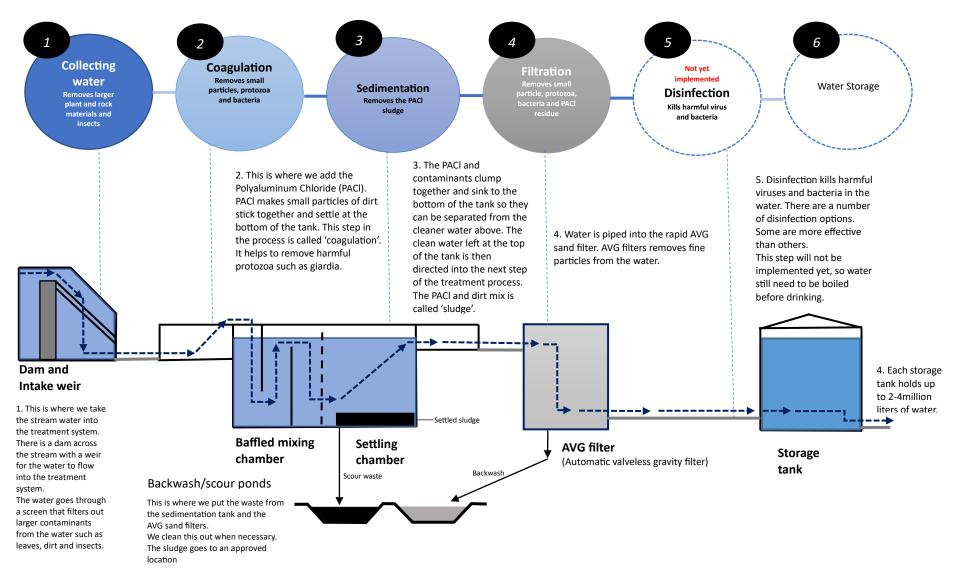

4. Management of Environmental Hazards and Risks

All hazards and risks are identified and using the risk assessment methodology attached in the Appendices Section as 6.1. The meaning of the color code: Red = Very High Risk, Brown = High Risk, Yellow = Medium Risk, Blue = Low Risk and Green = Very Low Risk.

Hazards and Risks (What they are and level of risk)	Potential Impacts	Mitigation Strategy	Monitoring Parameter	Monitoring Programme	Responsibility	Staff and equipment Requirement	Oversight
The result of long-term accumulation of organic material behind the weir during low water flow IC = Minor P = Low	Increased dissolved organic carbon behind the weir at the Intake - can contribution to increased dissolved organic carbon in the water which can influence the solubility level of aluminum in the water.	Short term + keep the area behind immediately behind the weir at the intake free of accumulated organic debris + Check twice weekly	- Accumulation of organic debris behind the weir especially during low water flow.	+ Keep an eye out for accumulation especially during times of low water flow. + Increase rotting smell of vegetation in the water. + Check twice weekly	+ Operator (s)	+ Operator (s) + 4 the more the better.	+ Supervisor
Increased E. Coli at Source. IC = Moderate P = High	- E. Coli from insects, geckos, skinks, bats, chickens, rats and dogs E. Coli stored on leaf detritus that is broken down and released into the water when it floods Adverse impact on the water quality Increase sludge in settling pond.	Short term + Keep intake free of accumulated organic detritus. + Check twice weekly Long term + Ongoing water testing + Awareness activities through the Tourism sector.	- E. Coli level	+ Continue with water testing programme. + Manage use of trek trail across the island.	+ Operator (s) + TTV laboratory staff + Tourism sector and Public Health.	+ Operator (s) + TTV laboratory	+ Supervisor
Increase suspended solids IC = Moderate P = Medium	- Adverse impact on the water quality increase sludge in settling pond.	+ Keep vegetation along lower slopes short. + Eliminate invasive species, e.g., pīpī-vai, rau-māniota and kākā. + Regular inspection of inner stream for overgrowth.	- Suspended solid level	+ Continue with water testing programme	+ Operator (s) + TTV laboratory staff	+ Operator (s) + 4 the more the better.	+ Supervisor
North side of ST wall, scouring of stream bank.	- North side walls of ST threatened, and may crack from instability.	Short term + Keep an eye on signs of advance scouring.	- Signs of advance scouring	+ At the moment no checking, but keep	+ Supervisor	+ Operator (s) x2 and vehicle	+ Manager + Supervisor

Hazards and Risks (What they are and level of risk)	Potential Impacts	Mitigation Strategy	Monitoring Parameter	Monitoring Programme	Responsibility	Staff and equipment Requirement	Oversight
IC = Moderate P = Low		Long term + Prevent advance scouring to protect ST north wall from potential damage, e.g., Gabion baskets or temporary rock revetments. +See engineering division for advice + Keep an eye on potential advance.		an eye out for signs of advance scouring. + Keep side of stream clear for easy visual observation. + Daily checking ¹ , and especially after major flooding event.		assigned, uses daily check list ² .	
Removal of debris from behind weir. IC = Moderate P = Medium	- Erosion in the catchment area May increase slips in the catchment area Increase sediment entering WTP.	Short term + Develop SOP for controlled release of materials downstream. + Controlled release of material downstream. Long term + Request for NES approval for controlled release of material downstream. + Investigate and construct silt trap options further inland of the intake and weir to minimize erosion.	- SOP - Debris deposits and volume of deposits When debris level is critical and after major rainfall Volume of material released.	+ Daily check + After major rainfall.	+ Operator (s) + Supervisor	+ Removal by contractor, T&M Heather. Supervisor to be present.	+ Manager + Supervisor
Sheltered location affecting dewatering process. IC = Moderate P = Low	- Slow dewatering process due to site restrictions, e.g., site is exposed but slow drying due to being sheltered (Not a regular problem).	Short term + Pump sludge from sludge pond to backwash pond to help with the next desludging. Long term + The pond could be redesigned to be shallower and wider.	- Time it takes for the sludge to dry.	+ Visual Inspection of condition in the sludge pond. + Visual inspection of condition in the backwash pond.	+ Operator + Supervisor	+ JW Estall Contractor (Sucker truck) and Supervisor.	+ Manager + Supervisor

¹ Daily Inspection by two (2) operators, two for the southside and 2 for the northside. There is a swap every week and operator rotation work apply. ² Checklist reporting attached as evidence in the Appendices Section as 6.2.

Hazards and Risks (What they are and level of risk)	Potential Impacts	Mitigation Strategy	Monitoring Parameter	Monitoring Programme	Responsibility	Staff and equipment Requirement	Oversight

5. Summary of Recommendations and Monitoring Programme

The following are recommended actions to improve the operation and effective management of this WTP.

There are two areas around the WTP that requires attention but are not priority areas. These are the protection of the north side of the settling tank as it is close to the stream, and the sheltered nature of the sludge ponds. Recommendations are provided for them to help deal with it in the long term.

Increase E. Coli, like with all WTPs, the threat from human presence can be managed through stringent laws to prevents additional risk to the system from people using the walking trek across the island.

It is important to investigate further ways to reduce the workload involved in the removing of debris from behind the weir. Removing the debris will also help prevent the accumulation of organic materials behind the weir.

The following are recommended strategies for each area identified as medium to high risk.

Hazards and	Recommendations	Monitoring Programme
Risks		
Increased E.	+ Keep intake free of accumulated organic detritus.	+ Continue with water testing programme.
Coli at Source.	+ Check twice weekly	+ Manage use of trek trail across the island.
	+ Ongoing water testing	
	+ Awareness activities through the Tourism sector	
Increase	+ Keep vegetation along lower slopes short.	+ Continue with water testing programme
suspended	+ Eliminate invasive species, e.g., pīpī-vai, rau-māniota and kākā.	
solids	+ Regular inspection of inner stream for overgrowth.	
North side of ST	+ Prevent advance scouring to protect ST north wall from potential damage,	+ keep an eye out for signs of advance scouring.
wall, scouring	e.g., Gabion baskets or temporary rock revetments.	+ Keep side of stream clear for easy visual observation.
of stream bank.	+See engineering division for advice	+ Daily checking, and especially after major flooding event.
	+ Keep an eye on potential advance.	

Hazards and	Recommendations	Monitoring Programme
Risks		
Removal of	+ Develop SOP for controlled release of materials downstream.	+ Revised SOP
debris from	+ Request for NES approval for controlled release of material downstream.	+ Measure volume of deposits.
behind weir.	+ Investigate and construct silt trap options further inland of the intake and	+ Remove debris when debris level is critical and after heavy rain in
	weir to minimize erosion.	Avatiu.
		+ Measure volume of material released.
		+ Daily check
Sheltered	+ The pond could be redesigned to be shallower and wider.	+ Determine time it takes for the sludge to dry.
location		+ Visual Inspection of condition in the sludge pond.
affecting		+ Visual inspection of condition in the backwash pond.
dewatering		
process.		

6. Appendices

6.1 Risk Assessment Methodology Used

The assessment of risks involved for each hazard is provided below in Tables 1 and 2.

Table 1 Level of risk impact and probability

Risk Criteria	Definition of Rating	Score
	A: Extent – The area over which the impact will be experienced	Local = 1; Island = 2; and National = 3
Impact (I)	B: Intensity – The magnitude of the impact, i.e., whether the impact will result in minor, moderate, major or catastrophic environmental, social and economic (including human health) changes	Low = 1; Medium = 2; and High = 3
	C: Duration – The time frame over which the impact will be experienced and its reversibility.	Short Term – 1; Mid Term – 2; and Long Term – 3
In	npact Consequences (Combined Score): Minor 3 – 4; Moderate 5 – 6; Major 7	7 – 8; Massive 9 – 10.
Probability	Improbable - Unlikely to occur during project lifetime	1
(P) -	Possible - May occur during project lifetime 20%-60% chance of occurring	2
Likelihood of the	Probable - Likely to occur during the project lifetime >60-90% chance of occurring	3
impact occurring	Highly probable - Highly likely to occur, or likely to occur more than once during project lifetime	4

Table 2 Matrix showing overall significance of the impact as a combination of the consequences and probability rating

		Probability of Occurrence						
		Improbable	Possible	Probable	Highly Probable			
of	Minor	Very Low	Very Low	Low	Low			
Consequences of Impact	Moderate	Low	Low	Medium	Medium			
lmsequ	Major	Medium	Medium	High	High			
Co	Catastrophic	High	High	Very High	Very High			

6.2 To Tatou Vai (TTV) Water Treatment Plant (WTP) Operator's Daily Check List (Source: TTV Treatment Division)

Date WTP	Sludge Level (%)	Bulk Tank (%)	Dose Rate (mg/L or g/m³)	Intake (NTU)	ST (NTU)	Post AVG (NTU)	Reservoir (NTU)	Flow Rate (L/Sec)	Reservoir (KPA)	Comments

Note: PACI storage tank (how full it is in %), PACI header tank (Float valve and arm), the sludge level in the settling tank (from bottom of tank to mid-way level in %), adjusting the dosing level of PACI (in mg/L), Intake (NTU), Sediment tank (Float valve arm at the NTU), Post AVG (NTU), RES (NTU) Flow rate (L/sec)